



15-100-14



15-100-15



 
15-100-16




15-100-18



15-100-20



15-100-22

 

15-100-24



15-100-26



OCHSNER-KOCHER

15-100-14	14,0 cm, 5 1/2 "
15-100-15	15,0 cm, 6 "
15-100-16	16,0 cm, 6 1/4 "
15-100-18	18,0 cm, 7 "
15-100-20	20,0 cm, 8 "
15-100-22	22,0 cm, 8 3/4 "
15-100-24	24,0 cm, 9 1/2 "
15-100-26	26,0 cm, 10 1/4 "
15-100-30	30,0 cm, 11 3/4 "
15-100-36	36,0 cm, 14 1/4 "
15-100-40	40,0 cm, 16 "



15-100-30



15-100-36



15-100-40