


prolite procedure

WEGG

Procedure trolley are a secure and portable storage option that helps to keep patient treatment supplies close at hand at all times. customizations, flexibility and ample work space are the features that procedure trolley guarantees



code	description	pcs
PLS600PR A Prolite 600 Procedure A		
PS6001	Prolite Standard basic body. overall measures mm 835x645x940 h	1
1062	key locking	1
6010BL	drawer mm 105 h front HPL probleue finish	3
6015BL	drawer mm 157 h front HPL probleue finish	2
2010	side tilt out pocket	4
2011	side storage bin	1
9001	aluminium poles kit for overtop structures	1
6050	full lenght aluminium storage shelf	1
6011	full length plexiglas storage shelf	1
6013	over top shelf including tape / label dispenser, glove box holder - single and bottle holder	1

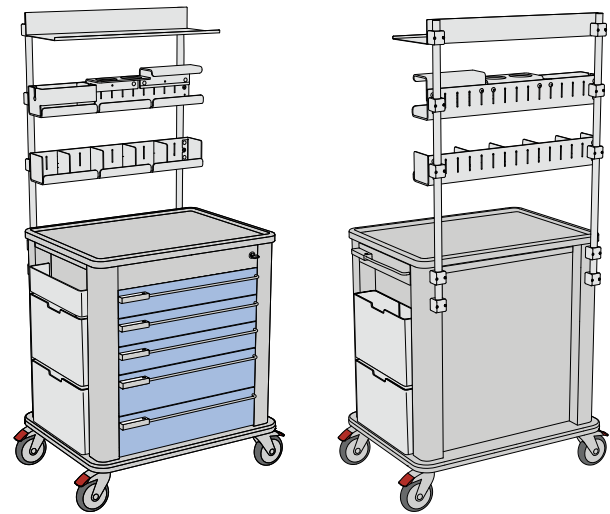

code	description	pcs
PLS600PR B Prolite 600 Procedure B		
PS6001	Prolite Standard basic body. overall measures mm 835x645x940 h	1
1062	key locking	1
1050	stainless steel pushing handle	1
6010YL	drawer mm 105 h front HPL proyelllow finish	3
6015YL	drawer mm 157 h front HPL proyelllow finish	2
2002	8 lt waste basket	1
2011	side storage bin	3
9001	aluminium poles kit for overtop structures	1
6014	double dispenser	1
6011	full length plexiglas storage shelf	1

