

**BECKER**



**BECKER M11** – Modular storage system for hospitals

**INFORMATION**

**905  
/1 E**



# BECKER

## BECKER M11

represents a new modular storage system for hospitals

- **better usage of surface area and space**
- **cost reduction**
- **modular adjustments**
- **flexibility and longevity**
- **cost transparency for process planning**



BECKER SYSTEMS for:

wards  
out-patient departments  
operating rooms  
treatment rooms  
sterilization

# BECKER

## Modular storage system for hospitals


# M11

### A contemporary modular storage system providing for more space and less cost.

Architects and designers planning in hospitals and medical facilities are now working with a new tool in design – **BECKER M11**. The advantage to previous systems rests in providing more storage space and flexibility. The layout is well structured and offers a lot of variety in usage. The different system components are perfectly matched and can therefore be combined interchangeably.

### Flexibility and cost efficiency

Flexibility and cost efficiency are gained via sophisticated modular structure. Each packing unit may be assembled onto another according to individual usage needs. Single unit prices may be calculated and added together. In the event that usage or area of application of an entire packaging system or a single unit changes, units or an entire system may be easily rearranged, supplemented, renewed or replaced.

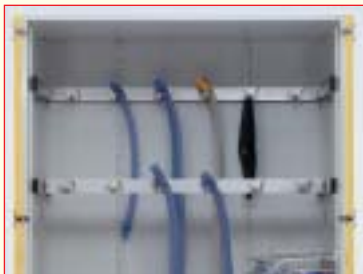

### Cost effectiveness by saving space

Conventional modular storage systems are based on “900” widths.

**BECKER M11** storage system measures 1100mm in width. Using the “1100” measure guarantees significant space advantages within in the same area.

For example using a width of 10 meters only 9 packaging systems versus 11 packaging systems are needed, which gains storage capacity. Savings in space, costs and work are guaranteed.



# BECKER M11

## Modular storage system for hospitals

Our steel furniture is manufactured with electrolytically galvanized and chromated thin sheet. Surfaces are powder coated. The customer may choose the colors from the Becker color flyer. All furniture is highly scratch and shock resistant as well as robust against contact with chemical agents.



**Interior design** made of chrome nickel steel sheets and tubing, material AISI 304 (1.4301) surface polished grain 240/320 as well as powder coated steel sheet for demanding "wear and tear" clinical usage. Chrome nickel steel elements are highly corrosion resistant and antimagnetic.

All interior components may be easily assembled and dismantled by simply loosening and twisting off screws. Components are screwed or put onto chrome nickel steel shelf support equipped with rubber buffering.

**Usage for interior width with multi purpose pullout and interior drawers amounts to 1005 mm.**

**Tall cabinets** include double walled, drumming noise buffered and reinforced components. The system includes an inserted double shelled floor, single wall rear panel and a double shelled top. Rear panels are also available double shelled for an additional charge.

**Doors** are equipped with dust resistant rubber sealing attached to wide angle hinges with a maximum 270-degree opening angle. Cabinet closures/locks are optional according to furniture description.

Robust, folded base frame with leveling fixture, standard measure 100 mm.





DESCRIPTION	ORDER NO.	
<p><b>Storage cabinet</b> made of powder coated sheet steel (choose colors from Becker color flyer) with two swinging doors, turning bolt lock, 6 grid ledges and 100 mm leveling fixture.</p> <p><b>cabinet measure:</b> width 1100mm, depth 670 mm, height 2100 mm</p>	BH200 67 110 2000	

# BECKER M11

## Modular storage system for hospitals

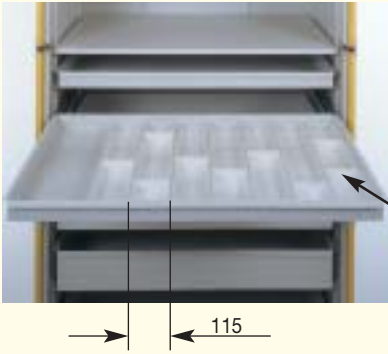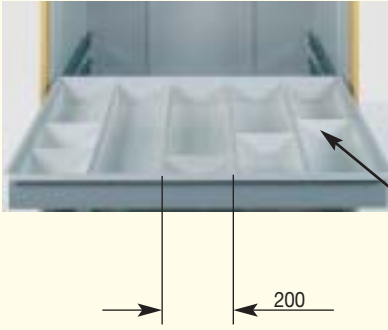

	DESCRIPTION	ORDER NO.	
	<p><b>Adjustable shelves</b> made of chrome nickel steel or powder coated sheet steel in the same color as cabinet body single or double walled design, 20 mm, including shelf support</p> <p><b>Single walled shelf, powder coated sheet steel</b></p> <p><b>Double walled shelf, powder coated sheet steel</b></p> <p><b>Single walled shelf, chrome nickel steel</b></p> <p><b>Double walled shelf, chrome nickel steel</b></p>	<p>551 67 110</p> <p>552 67 110</p> <p>553 67 110</p> <p>554 67 110</p>	
	<p><b>Multi purpose pullout drawers for sterile goods, packaged material and surgical laundry, or storage of surgical equipment</b> powder coated sheet steel in the same color as the cabinet body with ledge handle</p> <p><b>Multi purpose pullout drawer</b> edge 60 mm high with pullout chrome nickel steel support plate 20 mm high</p> <p><b>Multi purpose pullout drawer for equipment</b> multiple outlet power strips, 5 connections, total height 300 mm (electrical connection to be determined)</p>	<p>B01 A67 110 020-060</p> <p>B01 A67 110 020-300</p>	
	<p><b>Interior drawers</b> powder coated sheet steel in the same color as the cabinet body with ledge handle</p> <p>Interior drawer <b>60 mm high</b></p> <p>Interior drawer <b>100 mm high</b></p> <p>Interior drawer <b>150 mm high</b></p> <p>Interior drawer <b>185 mm high</b></p>	<p>B01 A67 110 060</p> <p>B01 A67 110 100</p> <p>B01 A67 110 150</p> <p>B01 A67 110 185</p>	
	<p><b>Wire basket M11</b> chrome nickel steel, including shelf support, height 400/180 mm</p> <p><b>Wire divider</b> for wire basket M11 chrome nickel steel</p> <p><b>Wire railing M11</b> chrome nickel steel, for drawer starting at height 60 mm</p> <p><b>Wire divider</b> for railing chrome nickel steel</p> <p><b>Pullout hanger</b> chrome nickel steel, maximum load bearing capacity 60 kg</p>	<p>L 12 01 0350</p> <p>L 12 01 0355</p> <p>L 12 01 0360</p> <p>L 12 01 0365</p> <p>V01 0190 67 110</p>	

	DESCRIPTION	ORDER NO.	
 <p>115</p>  <p>200</p>	<p><b>Drawer division for storage of small parts</b> made of powder coated sheet steel in RAL 9010, pure white – <b>series U01</b>. 7 powder coated inserts 115 mm wide with a total of 9 dividers, height 40mm</p> <p><b>Drawer division U01 C</b> in 17 compartments <b>starting at drawers 60 mm high</b></p> <p><b>Divider</b> for additional partition of compartments in drawer insertion U01</p> <p><b>Drawer division for storage of surgical instruments</b> made of powder coated sheet steel in RAL 9010, pure white – <b>series U02</b>. 5 powder coated inserts 200 mm wide with a total of 5 dividers, height 80 mm</p> <p><b>Drawer division U02 C</b> in 10 compartments <b>starting at drawers 100 mm high</b></p> <p><b>Divider</b> for additional partition of compartments in drawer U02</p>	<p>U01 C67 110 7-9 17</p> <p>U01001</p> <p>U02 C67 110 5-5 10</p> <p>U02001</p>	
	<p><b>Drawer division for storage of sterile implants</b> combination plastics/powder coated sheet steel in RAL 9010, pure white</p> <p><b>Transverse divider set, 40 mm high</b> in 4 compartments <b>starting at drawers 60 mm high</b></p> <p><b>Transverse divider set, 80 mm high</b> in 4 compartments <b>starting at drawers 100 mm high</b></p> <p><b>Transverse divider set, 140 mm high</b> in 4 compartments <b>for drawers 150 mm or 185 mm high</b></p> <p><i>for additional transverse division:</i> <b>Plastic divider legde, 40 mm high</b></p> <p><b>Plastic divider legde, 80 mm high</b></p> <p><b>Plastic divider legde, 140 mm high</b></p>	<p>U21 Q67 110 04 4</p> <p>U21 Q67 110 08 4</p> <p>U21 Q67 110 14 4</p> <p>U21 T67 04 1</p> <p>U21 T67 08 1</p> <p>U21 T67 14 1</p>	
	<p><b>Drawer division for storage of utensils</b> combination plastics/powder coated sheet steel in RAL 9010, pure white</p> <p><b>Cross divider set, 40 mm high</b> in 12 compartments <b>starting at drawers 60 mm high</b></p> <p><b>Cross divider set, 80 mm high</b> in 12 compartments <b>starting at drawers 100 mm high</b></p> <p><b>Cross divider set, 140 mm high</b> in 12 compartments <b>for drawers 150 mm or 185 mm high</b></p>	<p>U21 VC67 110 04 12</p> <p>U21 VC67 110 08 12</p> <p>U21 VC67 110 14 12</p>	

# BECKER M11

## Modular storage system for hospitals



	DESCRIPTION	ORDER NO.	
	<p><b>Storage for catheters</b> or shrink wrapped one way or multi purpose products made of chrome nickel steel with 6 hooks, additional hooks available if needed, total of 15 drillings</p> <p><b>Catheter suspension rear</b>, 6 hooks</p> <p><b>Catheter suspension center</b>, 6 hooks</p> <p><b>Catheter suspension front</b>, 6 hooks</p> <p>additional hooks may be screwed on, if necessary</p>	<p>V01 0200 67 110</p> <p>V01 0203 67 110</p> <p>V01 0206 67 110</p> <p>V01 0200</p>	
	<p><b>Instrument storage</b> made of chrome nickel steel with 14 hooks, additional hooks available if needed, total of 57 drillings</p> <p><b>Instrument suspension rear</b>, 14 hooks</p> <p><b>Instrument suspension center</b>, 14 hooks</p> <p><b>Instrument suspension front</b>, 14 hooks</p> <p><b>Instrument suspension</b>, double, total of 28 hooks, pullout</p> <p>additional hooks may be screwed on, if necessary</p>	<p>V01 0210 67 110</p> <p>V01 0213 67 110</p> <p>V01 0216 67 110</p> <p>V01 0218 67 110</p> <p>V01 0210</p>	
	<p><b>Storage for tubes and anaesthesia bags</b> made of chrome nickel steel</p> <p>tube suspension: double hooks for about 15 tubes as well as 15 anaesthesia bags (measures for specific projects have to be determined)</p> <p><b>Tube suspension rear</b>, 14 hooks</p> <p><b>Tube suspension center</b>, 14 hooks</p> <hr/> <p>Special anaesthesia suspension: 6 combination hooks for about 18 tubes and anaesthesia bags</p> <p><b>Special anaesthesia suspension rear</b>, 6 specialized hooks</p> <p><b>Special anaesthesia suspension center</b>, 6 specialized hooks</p>	<p>V01 0220 67 110</p> <p>V01 0223 67 110</p> <p>V01 0230 67 110</p> <p>V01 0233 67 110</p>	
	<p><b>Suspension for surgical table accessories</b> made of chrome nickel steel suspension with <b>standard</b> equipment rail</p>	<p>V01 0240 67 110</p>	
	<p><b>Pair of hooks and storage baskets</b> baskets made of chrome nickel steel, powder coated grid ledges with pair of hooks in RAL 9010, pure white for hooking in grid ledges</p> <p><b>Pair of hooks</b> for hanging up a basket</p> <p><b>Basket 1/2-STE</b>, 575 x 280 x 135 mm</p> <p><b>Basket 1/2-STE</b> slanted access, 575 x 280 x 135 mm</p> <p><b>Basket 1-STE</b>, 575 x 280 x 265 mm</p> <p><b>Basket 1-STE</b> opening access 575 x 280 x 265 mm</p> <p>Divider and labeling area see brochure "Flexible shelf system"</p>	<p>B01 0020</p> <p>120100 (31011)</p> <p>120110 (31111)</p> <p>120120 (31012)</p> <p>120130 (31013)</p>	

# BECKER



Becker quality steel furniture and equipment have been in use in hospitals and medical centers for decades. Optimum use of available space is achieved through an extensive line of programmes and sizes.

Special designs and individual choice of colors as well as custom-built systems offer an enormous variety of options to the customer.

Metallwarenfabrik  
Walter H. Becker GmbH  
Anzenkirchener Straße 4  
D-84371 Triftern

Tel.: +49 (0) 85 62 / 96 05-0  
Fax: +49 (0) 85 62 / 24 34  
E-mail: becker.triftern@t-online.de  
Internet: www.becker-triftern.de

BECKER SYSTEMS for:

wards  
out-patient departments  
operating rooms  
treatment rooms  
sterilization