

AVAILABLE VERSIONS					
LA	Left arm	IP	Integrated pump	Semiautomatic	
RA	Right arm	SP	Separated pump	TD	Total drive


Fiorella F360EX leads a new standard for functionality and safety.
All functions are integrated in this extraordinary lift to facilitate its use and to make it safe for both the wheelchair occupant and the assistant.



LA IP



SP

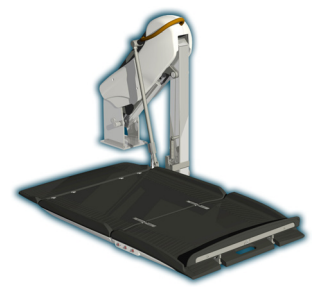

RA SP

GENERAL FUNCTIONAL FEATURES

- Fully automatic fold/unfold of the platform on Total Drive models
- Wireless remote
- Integrated command keys
- Vehicle-specific mounting brackets
- Injection-moulded protection shells
- High density polyurethane platform

GENERAL SAFETY FEATURES

- Anti-fall automatic outboard roll stop
- Automatic inner roll stop
- Blocking system with weight sensor
- Visual and acoustic signalling systems
- Anti-crushing system on main arm
- General protection fuse
- Emergency handling through manual pump

CONTROL PANEL LCD DISPLAY

- Start-up message
- Indication of the operation currently being performed by the lift
- Instructions to prompt the user to particular operation
- Cycle counting indicator for the scheduled maintenance
- Anti-crushing device failure indicator

TECHNICAL DATA

Overall Lift Width IP	1220 mm (48.03")
Overall Lift Width SP	1050 mm (41.34")
Overall Lift Height (stowed position)	1035 mm (40.75")
Usable Platform Width (Max)	765 mm (30.12")
Usable Platform Length (Max)	1075 mm (42.32")
Maximum Floor-To-Ground	690 mm (27.16")
Power	Electrohydraulic
Motor	12V DC / 58A
Max Speed Ascent/Descent	0,06 m/s
Max Load Capacity	360kg (794lbs)
Lift Weight	131kg (289lbs)
Lift Weight (TD)	140kg (309lbs)

CERTIFICATIONS

2006/42/EC	Machinery Directive
2009/19/CE	Electromagnetic Compatibility
EN 1756-2:2009	Platform lifts for mounting on wheeled vehicles - Safety requirements
Regulation ECE R17	Crash Test 20g - Structure and anchorage resistance to a deceleration above 20g for at least 20 ms.
Status Manchester Metropolitan University	Pull Test - Structure and anchorage resistance to a force equal to 20 times the weight of the lift.



AVAILABLE VERSIONS

LA	Left arm	IP	Integrated pump	Semiautomatic	
RA	Right arm	SP	Separated pump	TD	Total drive

